



Replacing Batteries

1 Position the unit so that its front panel rests on a flat surface such as a table.

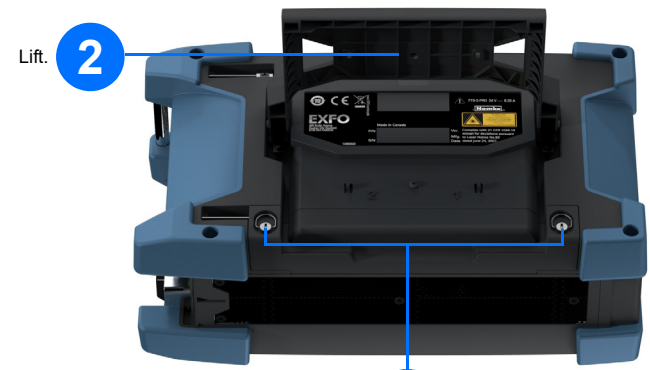

2 Lift.

3 Turn the screws counterclockwise until the compartment door is loose.

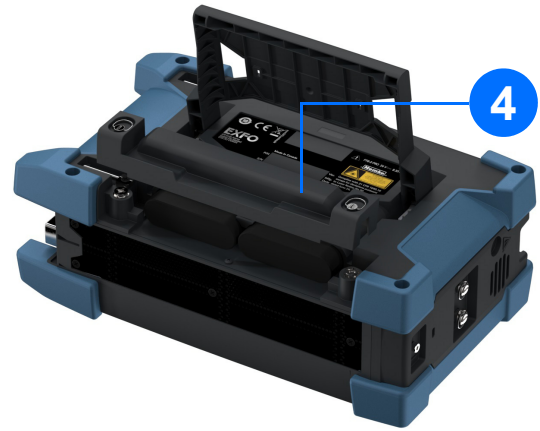


4 Remove.




Pull on the battery's tab to free it from its socket. **5**

Slide in the new battery (poles facing down and pointing towards the back of the battery socket).

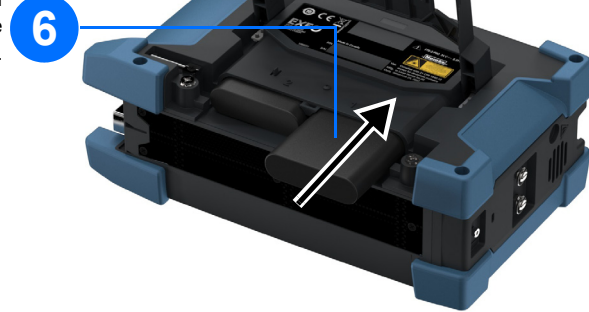

6

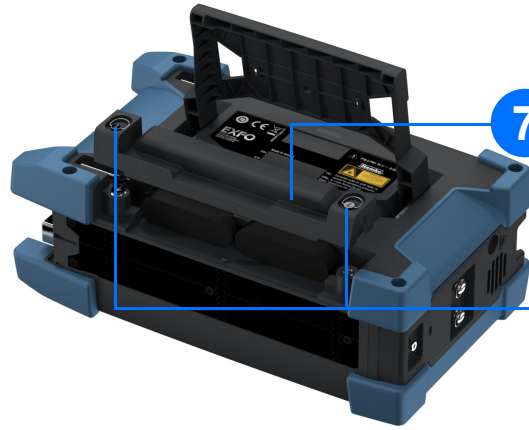

7 Put back in place.

8 While applying slight pressure, turn the screws clockwise until they are tightened.


Charging Batteries

Connect your unit to AC power with the provided AC adapter/charger (FTB-2 and FTB-2 Pro) or power cord (FTB-4 Pro).



Battery status LED
 Green: Fully charged
 Green, blinking: Charging
 Yellow: Battery level is low

Accessing Connectors and Ports

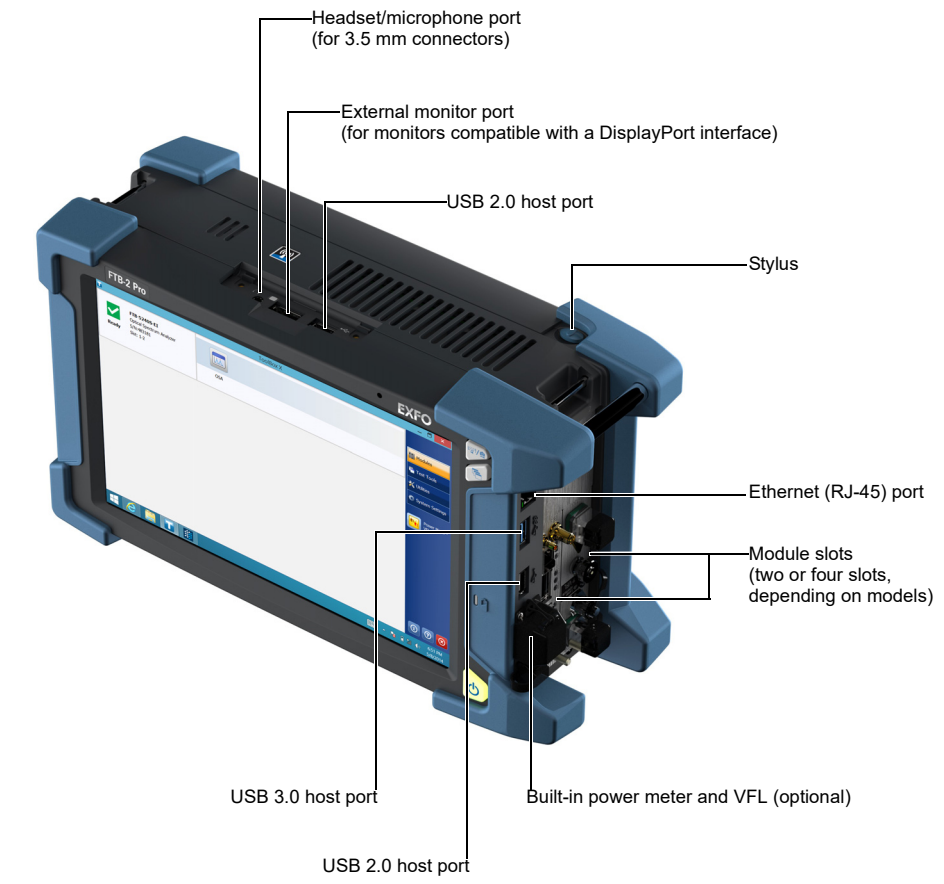

© 2017 EXFO Inc. All rights reserved.
 Printed in Canada (2017-03)
 P/N: 1070843 Version: 3.0.0.1



For more information, refer to the user guide.



Using Your Unit

Information about the inserted module
 Information about the inserted module

To start the applications related to the module
 To start the applications related to the module

Keyboard/screen capture button
 > Press once to show the on-screen keyboard. Press once again to hide it.
 > Hold down for a few seconds to take a screen capture.

Task-switching button
 > Press once to view the list of running applications.
 > Press as many times as needed to select the desired application.

Button bar
 To access modules and instruments, test tools, utilities, documentation, and to configure your unit

On/Off button
 > Press for one second to turn the unit on.
 > Press for one second to send the unit to sleep (default behavior).

To retrieve information about your unit
 To retrieve information about your unit

To view the online help
 To view the online help

Inserting Modules



CAUTION

- > For FTB modules: Never insert or remove a module while the unit is turned on. This will result in immediate and irreparable damage to both the module and unit.
- > For FTBx modules: There is no need to turn off your unit before inserting or removing modules. However, to remove them properly and avoid problems, follow the instructions from the user guide.

1 For an FTB module, press to turn off your unit.

2 Place the module vertically so that you can see its faceplate and the protruding edges are on the left side.

3 Insert the protruding edges of the module into the grooves and push all the way to the back.

4 Secure the module.

5 For heavier FTB modules such as the OSA or the FTB-88100NGE PowerBlazer, secure the module with front locking screws (turn clockwise).

Module adapters (must be installed before inserting FTB modules)

For an FTB module, turn the retaining screw (located on the left panel) clockwise.

For an FTBx module, turn the two retaining screws clockwise.